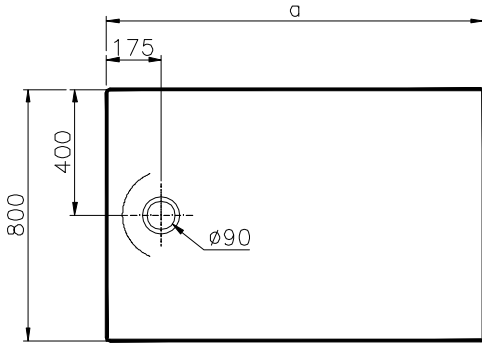


Description / Tanım : Rectangular Flat Shower Tray / Dikdörtgen Flat Duş Teknesi

Size / Ebat (cm)	180x80	170x80	160x80	150x80	140x80	120x80	100x80	90x80	80x80
Height / Yükseklik (mm)	40	40	40	40	40	40	40	40	40
Depth / Derinlik (mm)	18	18	18	18	18	18	18	18	18
Weigth / Ağırlık (kg)	24	22,5	21	19,5	18,5	15,5	12,8	11,3	10
Front Panel Weight / Ön Panel Ağırlığı (kg)	-	-	-	-	-	-	-	-	-
Side Panel Weight / Yan Panel Ağırlığı (kg)	-	-	-	-	-	-	-	-	-



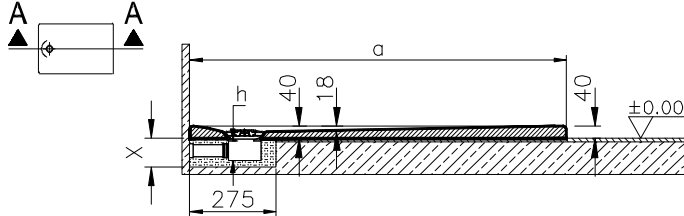
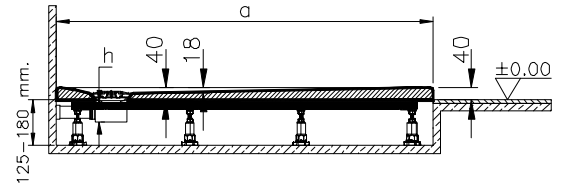
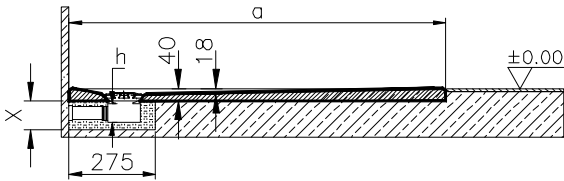
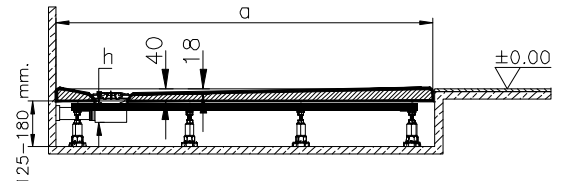
1



Plan

	180x80	170x80	160x80	150x80	140x80	120x80	100x80	90x80	80x80
a	1800	1700	1600	1500	1400	1200	1000	900	800

2

Flat
FlatFlat-With Feet
Flat-AyaklıBuilt-in
Sıfır Zemin - GömmeBuilt-in-With Feet
Sıfır Zemin - Gömme AyaklıSection
Kesit

Points to notice:

- The floor tiles should be even and the walls should be straight.
- Flat shower trays can be used with legs or as built-in.
- For built-in installations, a low floor application of 15 cm is required for the installation for the siphone and the depth of the shower tray.
- Because of this products' technical features give attention to the installation of finished floors.
- User Manual are delivered with the product.
- "X" The height needed for installation without leg set depends on the Syphon used.
- "X" is minimum 90 mm if Vitra Showertray Syphon is used.

Dikkat Edilecek Noktalar:

- Yer karolarının terazili ve düz, yan duvarların ise gönyeli olması gerekmektedir.
- Flat Duş Tekneleri ayaklı veya gömme olarak kullanılabilir.
- Gömme montaj uygulamasında sifon ve duş teknesi derinliği için 15 cm'lik düşük döşemeye ihtiyaç vardır.
- Teknik özelliğinden dolayı bitmiş zemin montaj uygulamalarında montaj adımlarına dikkat edilmesi gerekmektedir.
- Garanti Belgesi, Kullanım Kılavuzu ürün ile birlikte verilen poşet içerisinde.
- Ayaksız montaj uygulamasında gerekli yükseklik "X" kullanılacak sifona göre değişmektedir.
- Vitra duş teknesi sifonu kullanılacak ise "X" minimum 90 mm olmalıdır.



